

welldana®



pool spa sauna wellness

Welldana A/S

Randersvej 6 · DK-6700 Esbjerg

Phone +45 75 27 23 33

Fax +45 75 27 21 11

E-mail: info@welldana.com

www.welldana.com

Type 34-015041
Fjernbetjening til Welldana® Pool kontrol.



Copyright: Welldana A/S

Udgave: 1.1. Genoptryk 10 – 2009.

Language  & 

Sikkerhedsinstrukser:

- Denne fjernbetjening opfylder gældende regler for normer og sikkerhed.
- Fjernbetjeningen er **kun** til montering på styretavle 34-015040.
- Fjernbetjeningen har IP67.

Montage:

- Fjernbetjeningen opsættes et egnet sted i bassinrummet eller teknikrummet.
- Ledningen føres frem til styretavlen. Ledningen er 10m lang og er indstøbt i huset på fjernbetjeningen. Det er ikke tilrådeligt at forlænge ledningen yderligere.
- Undgå at lægge ledningen i nærheden af 230/400 V kabler, da dette skal skabe støj og fejlvisning på fjernbetjeningen.
- Ledningen monteres i styringen 34-015040. Terminalen har nr. 4; farverne er gul, grøn, brun og hvid.
- Efter monteringen af fjernbetjeningen overtager denne automatisk al kontrol med varmestyringen. Bassintemperaturen kan aflæses på displayet.
- Temperaturen kan sænkes med pil ned. Minimum temperatur kan indstilles på P3 i styretavlen. Temperaturen kan hæves med pil op. Maksimum temperatur kan indstilles på P4 i styretavlen.
- Displayet vil blinke, når der trykkes på enten pil op eller pil ned. Den blinkende værdi viser den valgte temperatur i bassinet. For at aflæse den valgte temperatur trykkes kortvarigt på en af pilene. Værdien vil ændre sig, hvis varigheden af trykket overstiger 3 sek.
- Lufttemperaturen kan aflæses ved at trykke på begge pile samtidigt, dog under forudsætning af at temperatursensoren er blevet monteret.
- Mål:
 - H: 82 mm
 - B: 60 mm
 - D: 16 mm

Safety instructions:


- This remote control complies with the rules and standards for safety at present in force.
- The remote control can **only** be mounted on control panel 34-015040.
- The remote control has IP67.

Assembling:

- The remote control is placed in a suitable spot in the pool room or the technical room.
- Lead the cable to the control panel. The length of the cable embedded in the house of the remote control is 10m. Extension of the cable is strongly deprecated.
- The cable must not be placed close to 230/400 V cables as this can cause noise and error in indication of the remote control.
- Mount the cable in the 34-015040 control. The terminal number is 4, the colours are yellow, green, brown and white.
- When the remote control has been mounted, it will be in complete control of the heat operation.
- The pool temperature can be read on the display.
- The temperature is lowered by using the descending arrow. Minimum temperature is adjusted with P3 on the control panel. Rise the temperature by using the upward arrow. Maximum temperature is set with P4 on the control panel.
- The display starts flashing by pressing either arrow. The temperature flashing shows the temperature you may have chosen for the pool water. Press briefly one of the arrows to read the chosen temperature. The value of the temperature will change, if you press for more than 3 sec.
- The temperature of the air is read by pressing both arrows at the same time provided that the temperature sensor has been connected.
- Measures:
 - H: 82 mm
 - W: 60 mm
 - D: 16 mm

Printkort på Welldana® Pool Kontrol.
 Tilslut ledningen til fjernbetjeningen på terminal nr. 4.

PCB on Welldana® Pool Control.
 Connect the wire for remote control onto terminal no. 4.

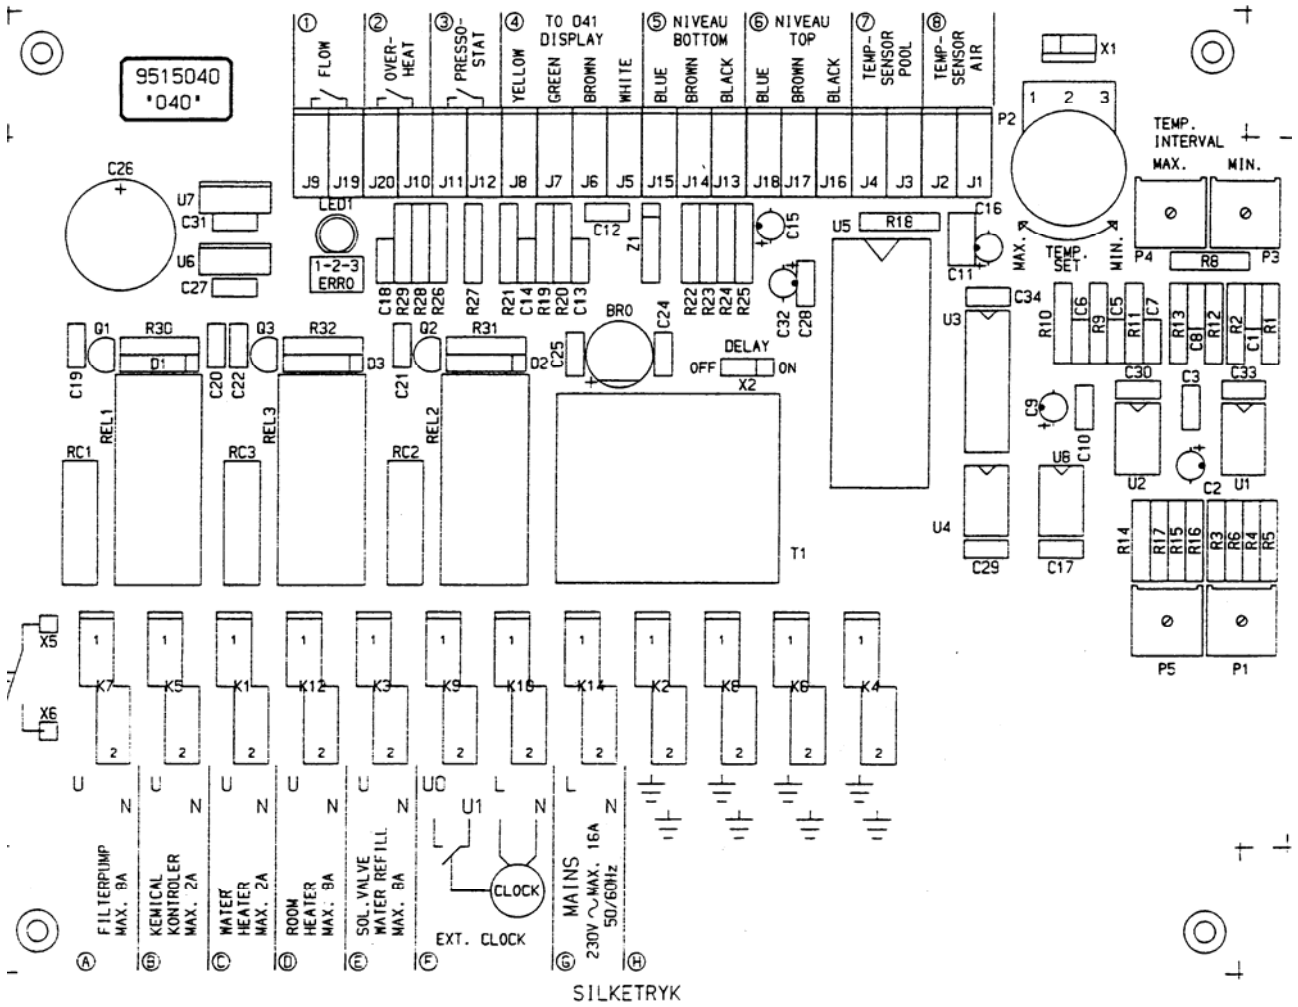

welldana®



pool spa sauna wellness

Welldana A/S

Randersvej 6 · DK-6700 Esbjerg

Phone +45 75 27 23 33

Fax +45 75 27 21 11

E-mail: info@welldana.com

www.welldana.com